

OP-4BT PREAMP OP-4BT PREAMP **OP-4BT PREAMP** OP-4BT PREAMP OP-4BT PREAMP **OP-4BT PREAMP** OP-4BT PREAMP OP-4BT PREAMP **OP-4BT PREAMP** OP-4BT PREAMP **OP-4BT PREAMP**

Owner's Manual

OP-4BT preamp

Congratulations on your choice of the Ovation Acoustic/Electric guitar equipped with the OP-4BT preamp. This starting preamp is designed to provide essential features for a great acoustic/electric guitar experience. To ensure optimal performance, please read this manual thoroughly.

OP-4BT PREAMP FEATURES

1. GAIN:

Adjusts the overall output level of the preamp. Turning this control clockwise increa ses sound level; counter-clockwise decreases sound level.

2. EQ BASS:

Boosts or cuts the low frequency elements of the guitar's sound. If moved above the center position the amount of low frequency power is increased. Below the center, these sound ore reduced. In the center detent position, the preamp does not affect these frequencies.

3. EQ MID

Boosts or cuts the middle frequency elements of the guitar's sound. If moved above the center position the amount of mid frequency power is increased. Below the center, these sound ore reduced. In the center detent position, the preamp does not affect these frequencies.

4. EO TREB

Boosts or cuts the high frequency elements of the guitar's sound. If moved above the center position the amount of high frequency power is increased. Below the center, these sound ore reduced. In the center detent position, the preamp does not affect these frequencies.

5. BUILT-IN TUNER

The OP-4BT comes with a convenient built-in tuner, allowing you to easily tune your guitar without the need for external equipment. This feature ensures that you're always in tune and ready to play.

6. DISPLAY

When you play a note after pressing the tune button, the tunerdisplay window clearly annunciates the following information.



TUNER ENABLED

The upper and lower segments alternately flash when the tuner is on and no note is played.



NOTE IN TUNE

When the note played is in tune to the reference, the note nams is displayed with a "diamond" on the right.



NOTE FLAT

When the note is flat, the note nams is displayed with an arrow pointing upthe direction to move the string's pitch.



NOTE SHARP

When the note is sharp, the note nams is displayed with a down arrow the direction to move the string's pitch.

7. OPERATION

To operate the preamp, ensure you have a fresh 9V battery installed correctly in the battery compartment. Plugging in a 1/4" shielded guitar cable into the jack activates the electronics in your guitar. The tuner can be used without plugging in. For the best results, connect the guitar to a PA system or an acoustic guitar amp after setup.



Specifications				
INPUT	1KHZ(SINE WAVE) 185mVac			
VOLUME CONDITION				
Master Volume	Max			
Bass volume	center			
Treble Volume	Center			
Tuner s/w	Off			
Middle Volume	Center			
PIEZO OUTPUT				
100Hz(80mVac)	1KHz(85mVac) 10KHz(78.3mVac)			
Tuner on	15mVac			
-3DB Frequency	30Hz			
S/N Ratio	38dB (Signal =>GND)			
Hum & Noise	5mVac (Signal =>GND)			
FREQUENCY RESPONSE				
		Min	Center	Max
Bass	80Hz	29mVac	85.6mVac	260mVac
Middle	1KHz	29mVac	85.2mVac	238mVac
Treble	15KHz	16.7mVac	77.6mVac	413mVac

LOW BATTERY	5.5Vac
-------------	--------

AP - TONE TEST





